

Power Inserter Replacement PI-GM60

 
 
 
For assistance email help@winegard.com or call 1-800-788-4417

1) Set the Switches

Settings are factory pre-set for DIRECTV®. For any other programming provider set according to the diagram:



Power Inserter switches




2) Wire the Antenna

With the power button on the power inserter in the OFF position (not pressed in), connect the primary port of the Carryout G2+ or Carryout G3 to the ANTENNA port on the power inserter with the 25' coaxial cable. Twist the cable on, and finger tighten plus 1/8th inch more (recommended torque 5-11 in-lbs.) with a wrench.

Do not overtighten.

Connect the "SAT IN" port of your satellite receiver to the RECEIVER port of the power inserter with the 3' coaxial cable. Twist the cable on, and finger tighten plus 1/8th inch more (recommended torque 5-11 in-lbs.) with a wrench. **Do not overtighten.**

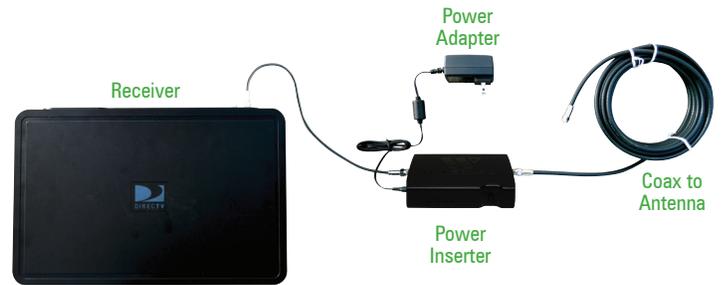

3) Power On and Scan

(Carryout G2+ or Carryout G3)

Plug the power adapter into 110/120VAC outlet and connect to the power port on the power inserter (next to RECEIVER coax port). Press the power button on the power inserter, wait approximately 3-5 minutes to scan. When the antenna is completely quiet, set up receiver for desired programming.

or Using as Cable Extender

(Dish Playmaker or Pathway)

Plug the power adapter into 110/120VAC outlet and connect to the power port on the power inserter (next to the RECEIVER coax port). Press the power button on the power inserter, power on the receiver, follow on screen instructions to initiate scan for satellite signal.

Winegard and Carryout are registered trademarks of Winegard Co. DISH is a registered trademark of DISH Network L.L.C. DIRECTV is a registered trademark of DIRECTV, LLC. Bell TV is a trademark of Bell Canada, Inc. Winegard Company, 2736 Mt. Pleasant St., Burlington, IA 52601 © 2016 Winegard Co.



WINEGARD

Rev 2 4/20 2452366

Power Inserter Replacement PI-GM60

 
 
For assistance email help@winegard.com or call 1-800-788-4417

1) Set the Switches

Settings are factory pre-set for DIRECTV®. For any other programming provider set according to the diagram:



Power Inserter switches




2) Wire the Antenna

With the power button on the power inserter in the OFF position (not pressed in), connect the primary port of the Carryout G2+ or Carryout G3 to the ANTENNA port on the power inserter with the 25' coaxial cable. Twist the cable on, and finger tighten plus 1/8th inch more (recommended torque 5-11 in-lbs.) with a wrench.

Do not overtighten.

Connect the "SAT IN" port of your satellite receiver to the RECEIVER port of the power inserter with the 3' coaxial cable. Twist the cable on, and finger tighten plus 1/8th inch more (recommended torque 5-11 in-lbs.) with a wrench. **Do not overtighten.**

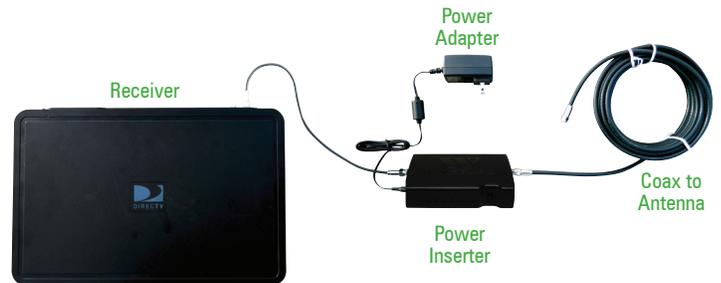

3) Power On and Scan

(Carryout G2+ or Carryout G3)

Plug the power adapter into 110/120VAC outlet and connect to the power port on the power inserter (next to RECEIVER coax port). Press the power button on the power inserter, wait approximately 3-5 minutes to scan. When the antenna is completely quiet, set up receiver for desired programming.

or Using as Cable Extender

(Dish Playmaker or Pathway)

Plug the power adapter into 110/120VAC outlet and connect to the power port on the power inserter (next to the RECEIVER coax port). Press the power button on the power inserter, power on the receiver, follow on screen instructions to initiate scan for satellite signal.

Winegard and Carryout are registered trademarks of Winegard Co. DISH is a registered trademark of DISH Network L.L.C. DIRECTV is a registered trademark of DIRECTV, LLC. Bell TV is a trademark of Bell Canada, Inc. Winegard Company, 2736 Mt. Pleasant St., Burlington, IA 52601 © 2016 Winegard Co.



WINEGARD

Rev 2 4/20 2452366