




# Mounting the TBP12 Phone Box

The TBP12 series enclosures feature (3) mounting feet on the rear of the enclosure. Using the included hardware, mount in the desired location. For more secure installation, (4) mounting locations on the rear of the enclosure can be used.

For models requiring drilling, using a 1/4" drill bit, drill through enclosure in locations shown.

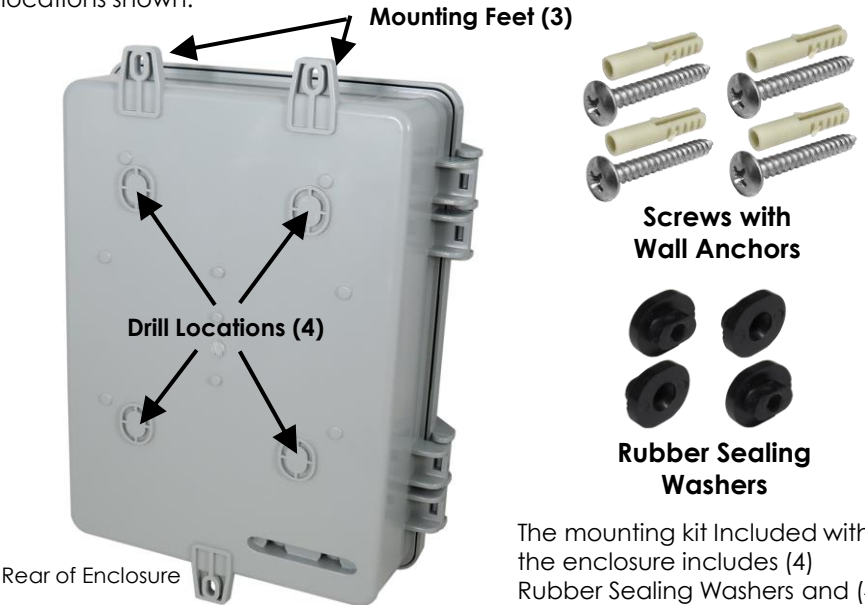

The mounting kit included with the enclosure includes (4) Rubber Sealing Washers and (4) Screws with Wall Anchors.

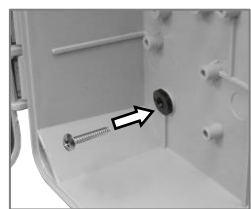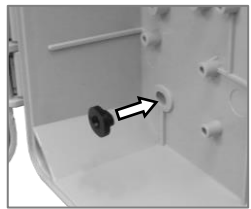


**Step 1**  
Place (4) Rubber Sealing Washers into (4) mounting holes as shown.

**Step 2**  
Secure the enclosure to the wall using the (4) Screws.

**Step 3**  
When mounting the enclosure, ensure the rubber sealing washers completely cover the enclosure mounting holes to provide a water-tight seal.

# Wiring the TBP12 Phone Box

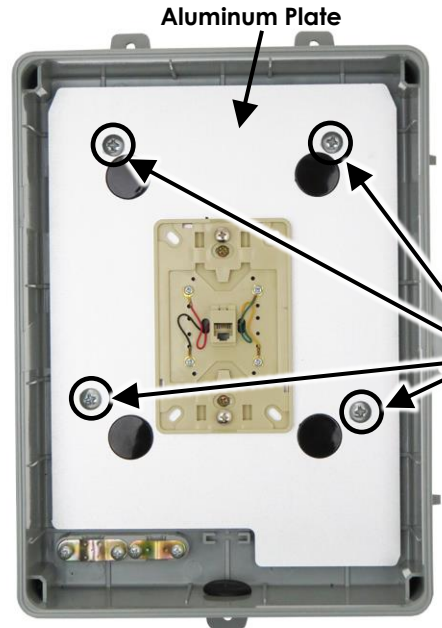


1. Remove the (4) screws securing the aluminum plate.


Note the TBP12 is shipped with the phone jack plate removed to facilitate wiring.

2. Once the aluminum plate is removed, carefully punch a hole in the rubber phone cable grommet located on the bottom of the phone box. Run your phone cable into the box through this grommet.

Note: For rear wiring, see page 3.

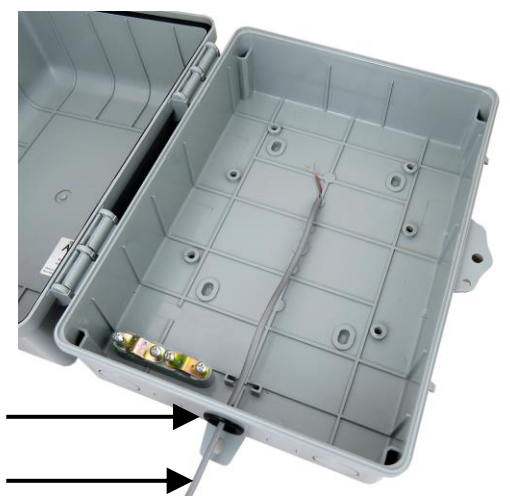


Back of Phone Jack

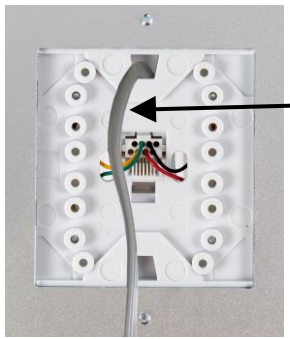

- 3. Run the phone cable behind the aluminum plate and up through the back of the RJ11 phone jack.


Phone Cable (not included)  
Screw Terminals

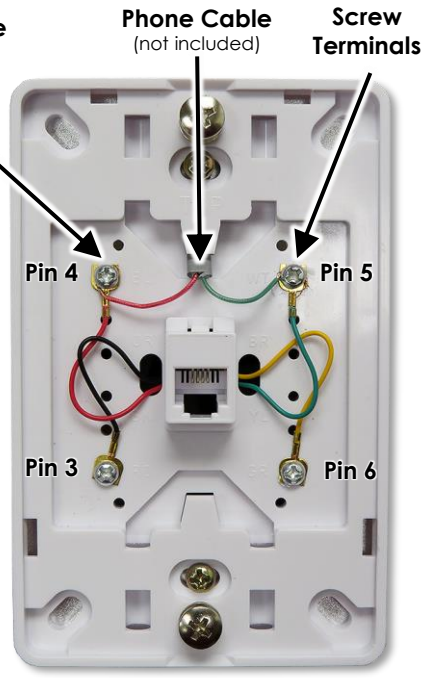

- 4. Strip individual phone wires approximately 1/4" and attach to screw terminals as shown. See below for jack pinout:

Pin Number	Wire Lead Color
3	Black
4	Red
5	Green
6	Yellow

Note: Standard telephone lines will typically use pins 4 & 5.

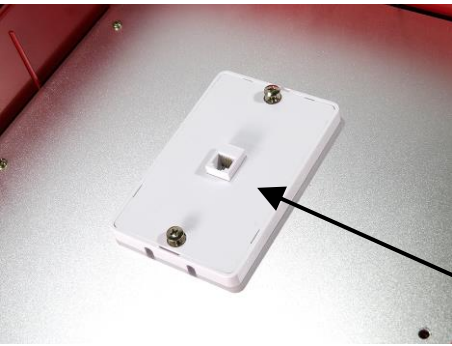


- 5. Secure aluminum plate to the enclosure using the (4) screws ensuring phone cable is beneath the aluminum plate.
- 6. Install phone jack cover by snapping into place.

Phone Jack Cover

Rear Wiring the TBP12 Phone Box

For installations requiring rear wiring, the TBP12 can be easily drilled. An additional rubber phone cable grommet is provided in the accessory kit for these types of installations.

Back of Phone Box

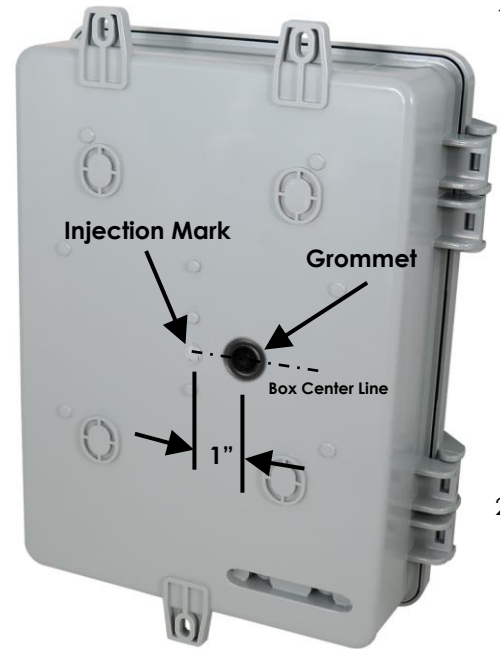

- 1. To use the included rubber phone cable grommet, a 5/8" hole will be required to be drilled through the rear of the box. Be sure to remove the aluminum plate as shown on page 2 prior to drilling.

The following shows the recommended hole location

Note: The drill location is referenced off an injection mark on the rear of the box.

- 2. Once the 5/8" hole is drilled, install the rubber phone cable grommet as shown. Carefully punch a hole in the grommet and run your phone cable into the box through this grommet.
- 3. Follow steps on page 2 for wiring.

Installation Note:

For installations that require better protection from water we recommend drilling a 1/4" hole in the location shown above. Once the phone cable is wired to the box, seal the hole with silicone.

Got Questions?  
We are here to help.  
Contact us at:



sales@altelix.com



USA & Canada Customers: 866-660-9434  
International Customers: +1 561-660-9434